



INSTALLATION INSTRUCTIONS

Accessory
TRUNK TRAY
P/N 08U45-T3L-100


Application
2013 ACCORD
2-DOOR

Publications No.
All 13025

Issue Date
OCT 2012

PART LIST


Trunk tray

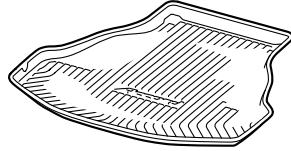

TOOLS AND SUPPLIES REQUIRED

Utility knife

Illustration of the Trunk Tray in the Vehicle

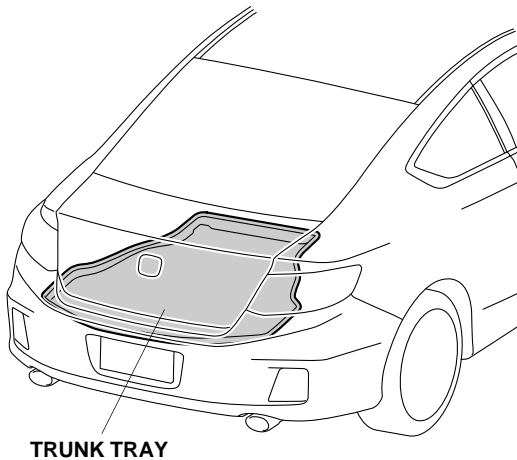


QB60407AB

INSTALLATION

If the vehicle is equipped with a cargo net, go to step 2; otherwise, continue with step 1.

Without Cargo Net


1. Open the trunk lid. Place the trunk tray on the trunk floor.

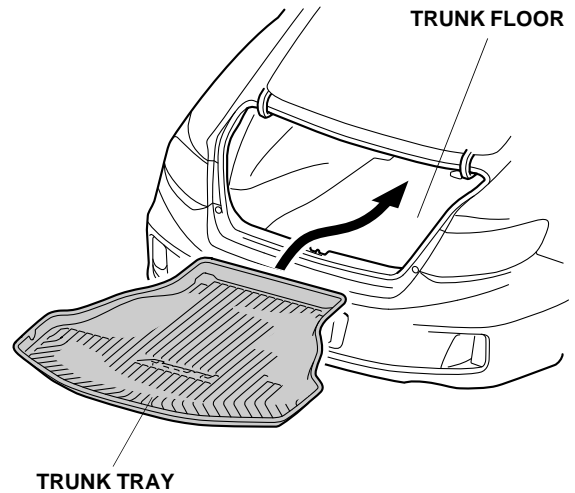

QB60408AB

With Cargo Net

- Using a utility knife, cut the trunk tray in the areas shown.

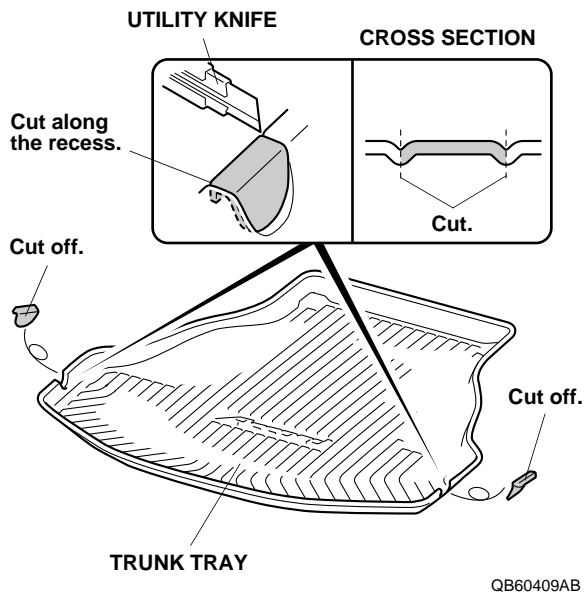

- Open the trunk lid. Place the trunk tray on the trunk floor.

